 


WARNING


FAILURE TO FOLLOW BELOW DIRECTIONS WILL VOID ANY WARRANTY OF PRODUCT THROUGH RYONET

- ★ EQUIPMENT MUST BE USED IN A CLIMATE CONTROLLED ENVIRONMENT BETWEEN 50-75 DEGREES AND ABOVE 55% HUMIDITY.
- ★ EQUIPMENT MUST BE LEFT POWERED ON AT **ALL** TIMES AND CONNECTED TO A SURGE PROTECTOR
- ★ EQUIPMENT MUST BE USED TO PRINT AT LEAST TWICE A WEEK TO ENSURE PROPER MOISTENING OF THE PRINT HEAD. IF NOT PRINTING ARTWORK OR JOBS VIEW BELOW
- ★ USER MUST USE THE NOZZLE CHECK UTILITY WITHIN EPSON DRIVER ONCE A WEEK TO ENSURE PROPER MAINTENANCE (DIRECTIONS BELOW)

LOCATE YOUR PRINTERS AND FAXES FOLDER WITHIN YOUR COMPUTERS CONTROL PANEL. ONCE LOCATED SELECT YOUR PRINTER (SHOWN BELOW) AND "RIGHT" CLICK ON THE ICON.



WITHIN THE EPSON 4880 WINDOW SELECT THE "UTILITY" TAB AND THEN SELECT THE "NOZZLE CHECK" BUTTON. ONCE PROMPTED SELECT "YES" TO INITIATE THE CLEANING.

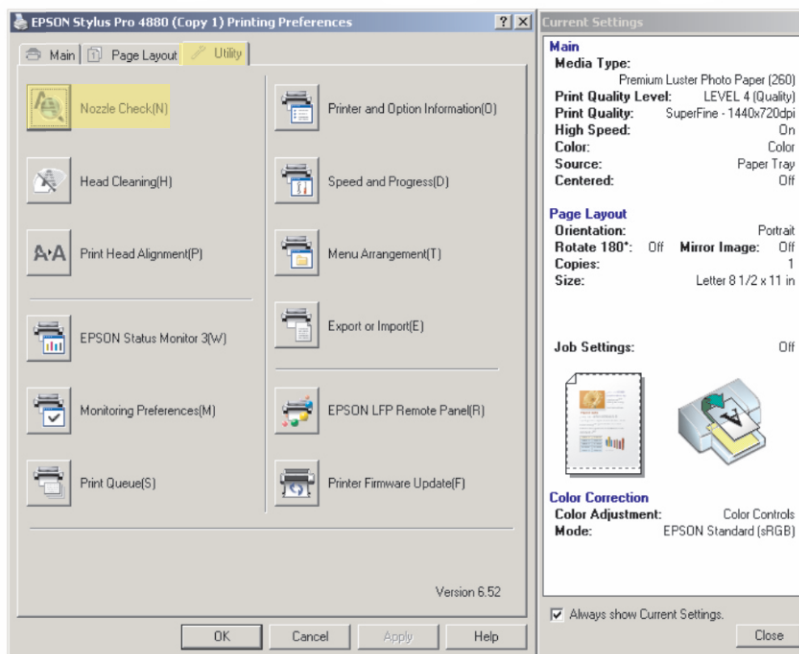

QUESTIONS???
CONTACT SUPPORT
SUPPORT@RYONET.NET